

GRACO®

 
Stroller

OWNER'S MANUAL

Model No. _____
Serial No. _____

Dear Customer,

Please fill in the model and serial numbers above from the label on the rear leg of your new stroller.

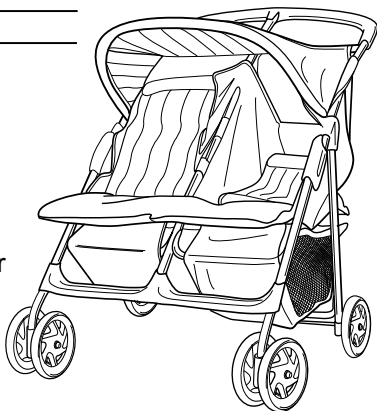

Model No. 6500 Series

Congratulations on your purchase of a Graco® stroller!

Graco is a world leader in strollers and has helped thousands of parents transport their children in comfort. We believe your new Graco® stroller is a wise choice, promising many hours of enjoyment for your baby.

Before using your stroller, please take a few minutes to read this Owner's Manual. The short time you spend reading these instructions will help you assemble and use your stroller properly.

**Please save your Owner's Manual
for future use.**

 
Customer Satisfaction

Our goal is to make every product the best it can be! We are also committed to supporting our products after purchase. If you would like to speak to Graco about your product, please contact our **Customer Service Department at 1-800-345-4109** or visit our Internet website, www.gracobaby.com. Our knowledgeable staff will be ready to answer any questions you may have concerning parts, use or maintenance. When you call, please have the **model and serial numbers** ready so your call may be processed quickly and efficiently.

WARNING




Never leave child unattended.
Always keep your child in view.

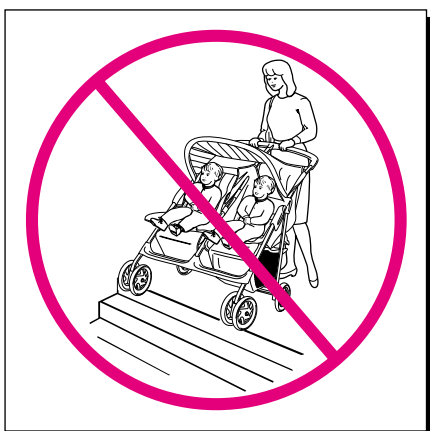


Never use stroller on stairs or escalators.
You may suddenly lose control of the
stroller or your child may fall out. Also,
use extra care when going up or down
a step or curb.

 Failure to follow these warnings and the assembly instructions could result in serious injury or death.

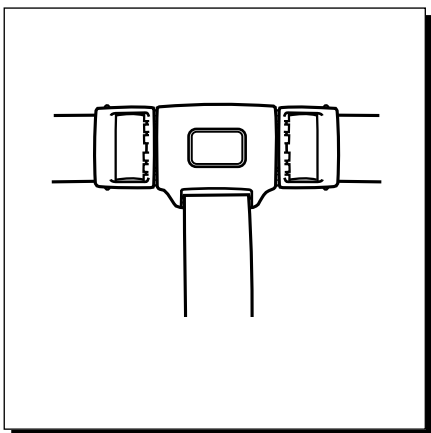

 Avoid serious injury from falling or sliding out. Always use seat belt.

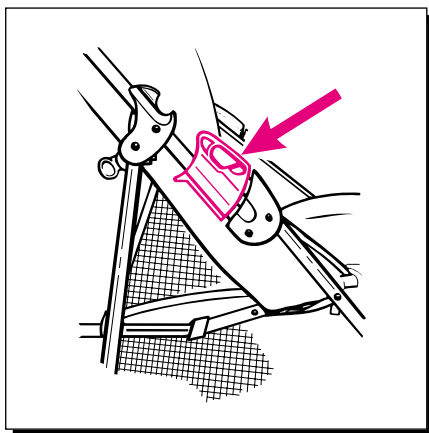

Be certain the stroller is fully erected and latched before allowing your child near the stroller.



Use of the stroller with two children weighing a total of more than 80 lbs. (36.2 kg) will cause excessive wear and stress on the stroller. The weight in either seat should not exceed 40 lbs. (18.1 kg).



DO NOT place purses, shopping bags, parcels and accessory items on handle or canopy. They may fall on the child or change the balance of the stroller and make it unstable.

TO PREVENT A HAZARDOUS CONDITION, do not place more than 10 lbs. (4.5 kg) in the storage basket. **DO NOT** use storage basket as a child carrier.

DO NOT ALLOW YOUR CHILD to stand on the basket. It may collapse and cause injury.

 
AVOID STRANGULATION. **DO NOT** place items with a string around your child's neck, suspend strings from this product, or attach strings to toys.

NEVER ALLOW YOUR STROLLER to be used as a toy.

STROLLER TO BE USED only at walking speed. Product not intended for use while jogging, skating, etc.

DISCONTINUE USING YOUR STROLLER should it become damaged or broken.

instructions

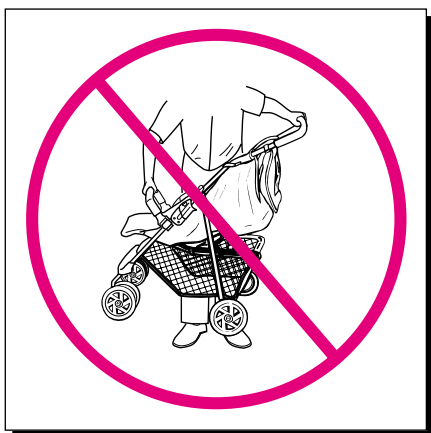

DO NOT lift the stroller by the arm bar or child's tray.



Never place child in the stroller with head toward front of the stroller.

FOR ADDITIONAL IMPORTANT INFORMATION, please see the Helpful Hints and Care and Maintenance sections in these instructions.

 
PARTS LIST

CHECK that you have all the parts listed below
BEFORE assembling your stroller.


If any parts are missing,
call Customer Service at 1-800-345-4109
or visit our Internet website, www.gracobaby.com.

THIS PRODUCT REQUIRES ADULT ASSEMBLY.


No tools required for assembly.

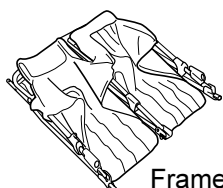

Frame

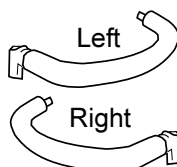 

Arm bar (2)
(on certain models)

 

Front wheel
assembly (2)



Rear wheel (2)



Rear axle
mount (2)



Cap
(2, 1 extra)



 
 
Retainer
(2, 1 extra)



Rear axle

To Unpack Stroller

⚠ WARNING To prevent serious injury or death
from choking, remove and **IMMEDIATELY** discard
the plastic covers on the front leg pins.

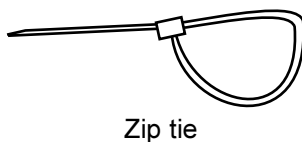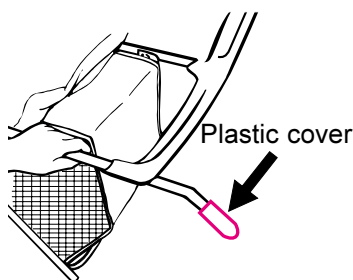


Zip tie

Step 1.

Flatten stroller carton to
protect floor.


Step 2.

 Release storage latch. Flattened
carton

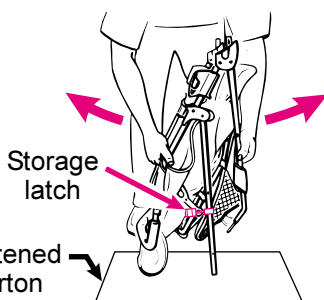

Step 3.

 
Open stroller on carton until locking latches on both sides are locked.

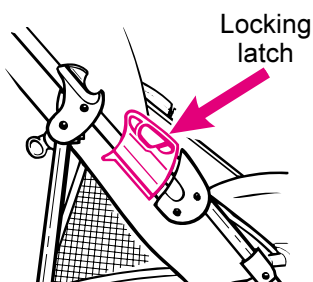

To Assemble Front Wheels

Step 1.

 Line up pin on bottom of front leg with the wheel assembly as shown. **Plastic snap inside wheel mount must be away from pin.**

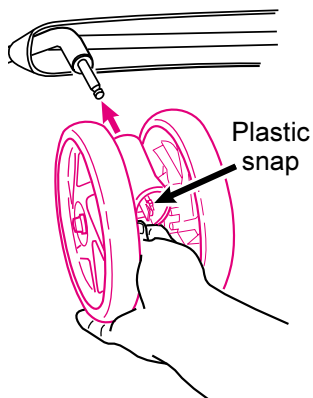

Step 2.

Push wheel assembly onto pin until it snaps in place.

Step 3.

 
Repeat for other wheel.

Pull firmly on each wheel assembly to be sure the wheel assemblies are securely attached.

To Assemble Rear Axle

Step 1.

Turn stroller over and position rear axle mounts on rear legs as shown. Brake levers must face rear of stroller. Push axle mounts on until plastic tabs snap into the slots on the legs.

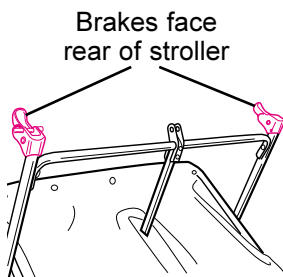


Step 2.

CHECK that axle mounts are securely attached by pulling firmly on each axle mount.

⚠ WARNING To prevent serious injury or death from choking, remove and **IMMEDIATELY** discard the plastic covers on the ends of the rear axle.


Step 3.

 Put the axle through both axle mounts and the center support as shown.

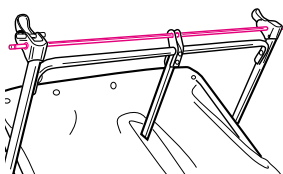


To Assemble Rear Wheels

 Place parts on rear axle **in order** as shown. Push red retainer onto axle **BEFORE** attaching white cap.

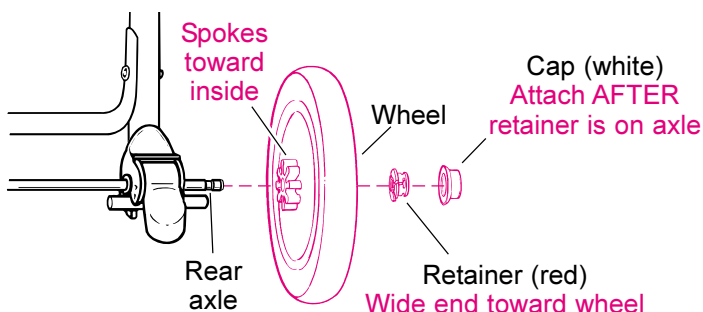

 Snap red retainer into axle groove. Then snap cap over red retainer as shown.

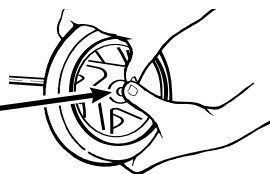


Be sure cap is snapped securely over red retainer.

To Unfold Stroller

Step 1.

 Release storage latch and begin opening stroller.

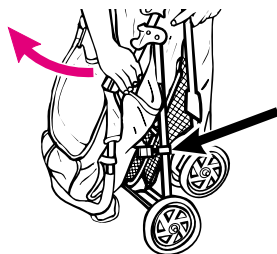

Step 2.

 
Continue unfolding until both latches lock.




To Use Brakes

⚠ WARNING Always apply both brakes when parking stroller.

Push **DOWN** to park.

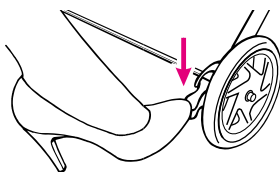


Lift **UP** to stroll.

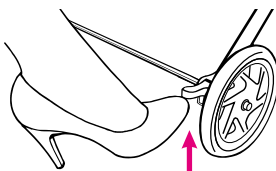 

To Adjust Canopy

 Push or pull canopy to desired position.

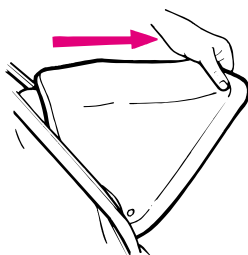

To Secure Your Child

 
⚠ WARNING Avoid serious injury from falling or sliding out. Always use seat belt.

Your stroller will have **either** a three-point buckle or a double buckle waist belt. Follow the appropriate instructions below.

Three-Point Buckle Waist Belt:


Step 1.

Place crotch strap between child's legs and snap both side buckles to the center buckle. Adjust belt as needed to get a snug fit around your child.

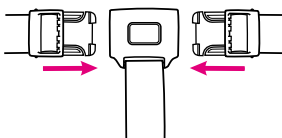

Step 2.

 
Push in on front of buckle to release.

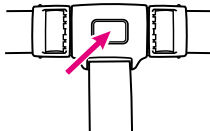

Double Buckle Waist Belt:


Step 1.

 Place crotch strap between legs and fasten both belt buckles together. Adjust belt at both buckles as needed to get a snug fit around your child.

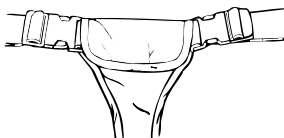

Step 2.

 Squeeze sides of buckles to release.

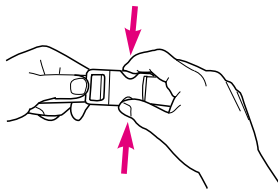

To Fold Stroller

 
Before folding, fold canopy.

Step 1.

Fully recline the seat back.


Step 2.

Pull latches up to release and fold handle down.

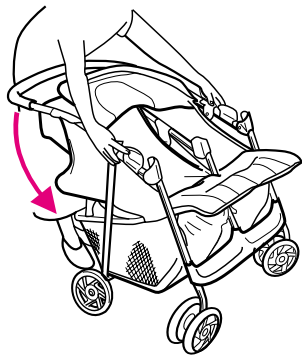


OR

 On certain models, pull red latches on handle up to release. Fold handle down.

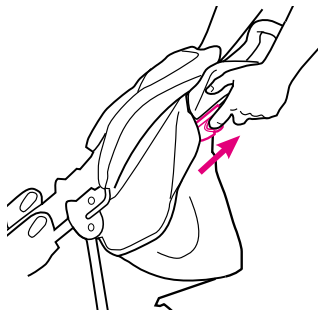

Step 3.

 Close and lock storage latch.

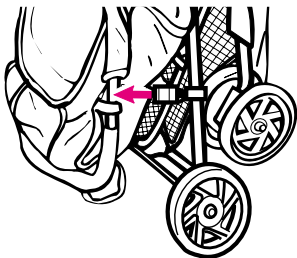


The following optional features are found only on certain models:

To Adjust Seat Backs*

Step 1.

 To recline the seat, push the two latches behind the seat toward each other.

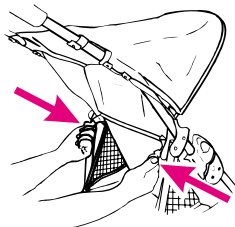

Step 2.

To adjust seat to upright position, lift the seat back until both recline latches are locked.



▲ WARNING Fabric caught in the latches may prevent them from locking. When returning seat to upright position, do not allow fabric to be pinched in the latches.

*** On certain models**

To Use Arm Bars*

⚠ WARNING Always secure your child with the seat belt. The arm bars are not restraint devices.

DO NOT lift the stroller by the arm bars.

Use care when clamping the arm bars on the stroller with a child in the stroller.

“Left” and “right” arm bars are as caregiver would see them from front of stroller.

Step 1.

 
Snap arm bars onto sides of front legs as shown below. **The brackets must be attached with curved side up.**

Step 2.

To close the arm bars, face the stroller. Push the free end of the **left** arm bar into the **upper** hole in the center mount of the stroller. Push the free end of the **right** arm bar into the **lower** hole of the center mount. **CHECK that arm bars are secure by pulling on them.**

Step 3.

To open arm bars, squeeze the metal buttons near the free end of each arm bar to unlock them. Buttons may be hidden under the arm bar pad.

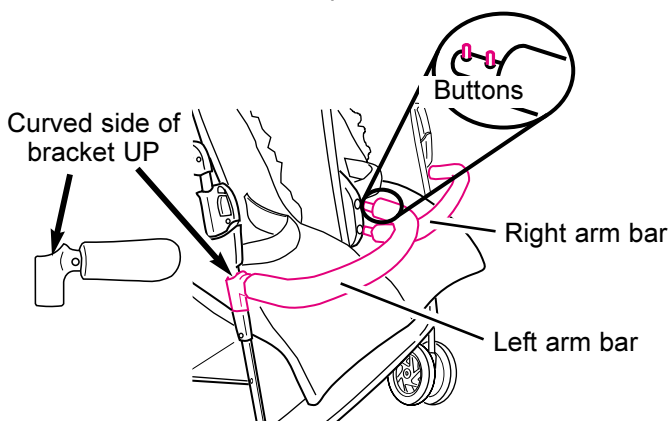

To Change to Swivel or Non-swivel Wheels*

Front swivel wheels lock for use on uneven surfaces such as grass, stones or gravel.

 
Before locking swivels, first push stroller forward a few feet to ensure the wheels are correctly positioned.



Push buttons up or down, depending on model, to lock or release swivels. Turn swivel to check that it is locked or released.

HELPFUL HINTS

IF WHEEL SQUEAKS, use a light oil (e.g., WD-40, 3-in-1, or sewing machine oil). It is important to get the oil into the axle and wheel assembly as illustrated.

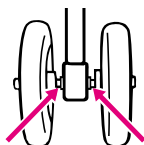


WHEN USING YOUR STROLLER AT THE BEACH, completely clean your stroller afterward to remove sand and salt from mechanisms and wheel assemblies.

TO STAND FOLDED STROLLER, lock the brakes.

CARE AND MAINTENANCE

 TO CLEAN THE SEATS on models with side latches, unscrew the plastic clasps under the seats and the two release latches on the handle. (When removing latches, note location of the long screw and the wire attachment holes.) Hand wash in warm water with a mild detergent. Drip dry only—seats contain plastic inserts. Replace seats on frame when dry. Reattach wires to latches, then screw latches and clasps back onto stroller frame.

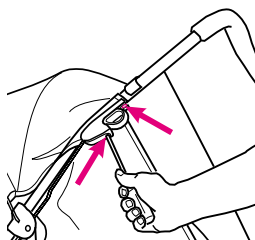

REMOVABLE SEAT PADS (if so equipped) may be machine washed in lukewarm water on delicate cycle and drip-dried. **NO BLEACH.**

FROM TIME TO TIME CHECK YOUR STROLLER for loose screws, worn parts, torn material or stitching. Replace or repair the parts as needed. Use only Graco® replacement parts.

TO CLEAN STROLLER FRAME, use only household soap or detergent and warm water. **NO BLEACH.**

EXCESSIVE EXPOSURE TO SUN OR HEAT could cause fading or warping of parts.

Replacement Parts

Instructions for ordering stroller parts:

Complete form below. Your stroller model number **MUST** be included on the form to ensure proper replacement parts. **Your model number can be found on a sticker on the rear leg of your stroller. Payment must accompany your order.**

Parts List:	Price:**
Seat	\$20.00
Canopy	\$18.00
Front wheel assembly (2 wheels per unit)	\$16.00
Rear axle	\$10.00
Rear axle mounts	\$ 5.00 (for two)
Rear wheel	\$ 8.00 (each)
Rear wheel hardware	No charge
Basket	\$16.00
Right arm bar* (seen from front)	\$13.00
Left arm bar* (seen from front)	\$13.00
Removable cloth pad*	\$16.00

* On certain models only.

** Prices subject to change without notice.

IF YOU NEED HELP

If you have any questions or if you need any part not listed, please call toll-free:

1-800-345-4109

or visit our Internet website, www.gracobaby.com.

Return the form below with payment to:
GRACO CHILDREN'S PRODUCTS INC.
CUSTOMER SERVICE DEPARTMENT
P.O. BOX 100, MAIN STREET
ELVERSON, PA 19520

Model No. (required) _____	SHIP TO: _____
Serial No. (required) _____	Name _____
<input type="checkbox"/> Seat	Address _____
<input type="checkbox"/> Canopy	City, State, Zip _____
<input type="checkbox"/> Front swivel assembly	() Telephone _____
<input type="checkbox"/> Rear axle	
<input type="checkbox"/> Rear axle mounts	
<input type="checkbox"/> Rear wheel	
<input type="checkbox"/> Basket	
<input type="checkbox"/> Right arm bar	<input type="checkbox"/> Check enclosed
<input type="checkbox"/> Left arm bar	(payable to Graco Children's Products Inc.)
<input type="checkbox"/> Removable cloth pad	<input type="checkbox"/> Charge to credit card:
	<input type="checkbox"/> Visa
	<input type="checkbox"/> MasterCard
	<input type="checkbox"/> Discover
Subtotal: _____	
Shipping & handling*: <u> \$5.00 </u>	Account #: _____
6% sales tax (PA only): _____	Expiration date: _____
Total: _____	Signature: _____

*\$15.00 outside the continental U.S.